



Soft Closing Frunk

For Model 3/Y



Soft-close frunk

Disassembly:



1 Remove trim (Clips)




2 Remove ventilation duct (Clips)



3 Loosen the storage box retaining screws




4 Take out the storage box

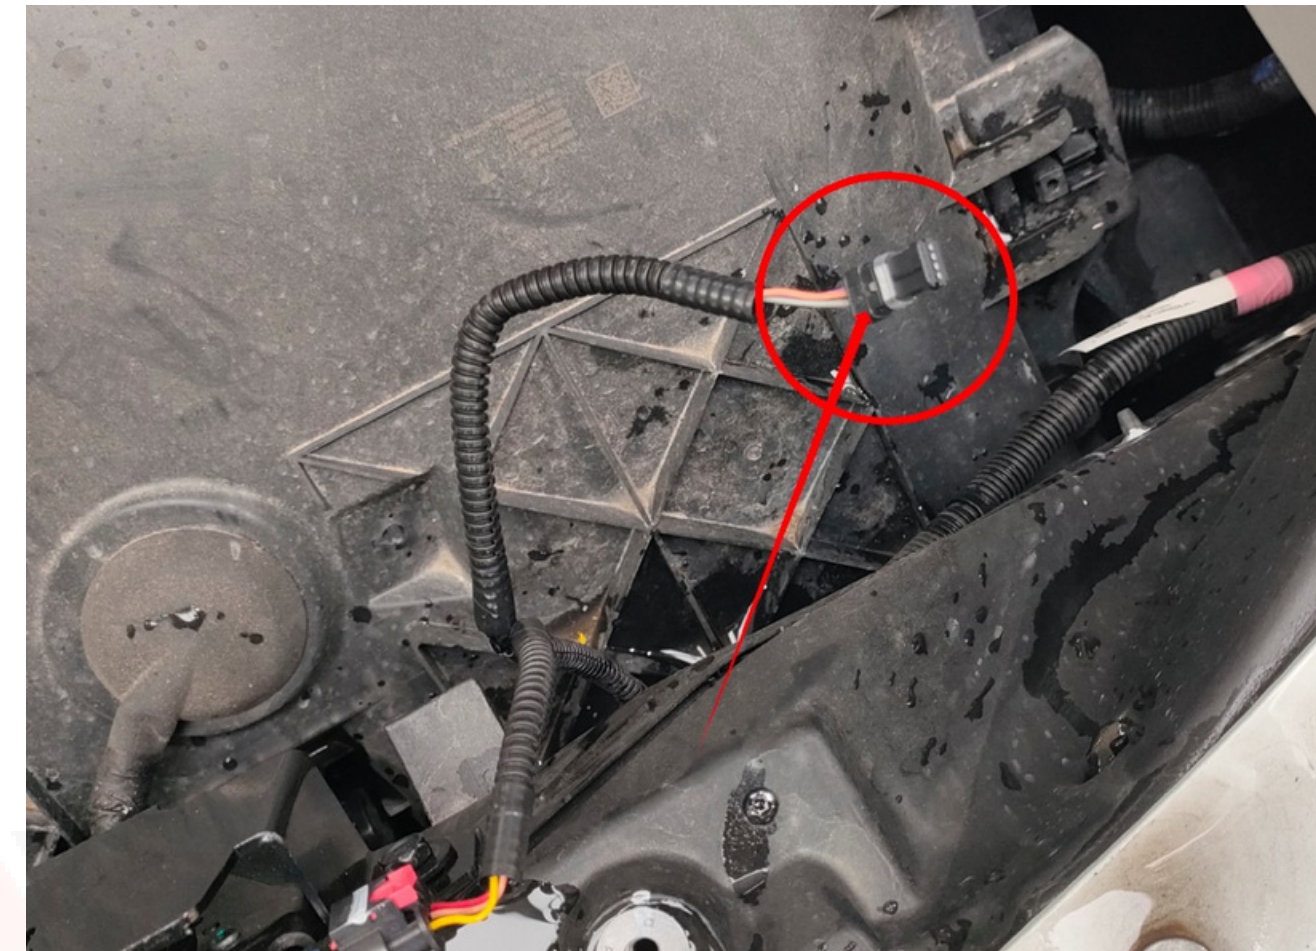

5 Before taking out the storage box, unplug this wire (For frunk lights)


Install instructions:

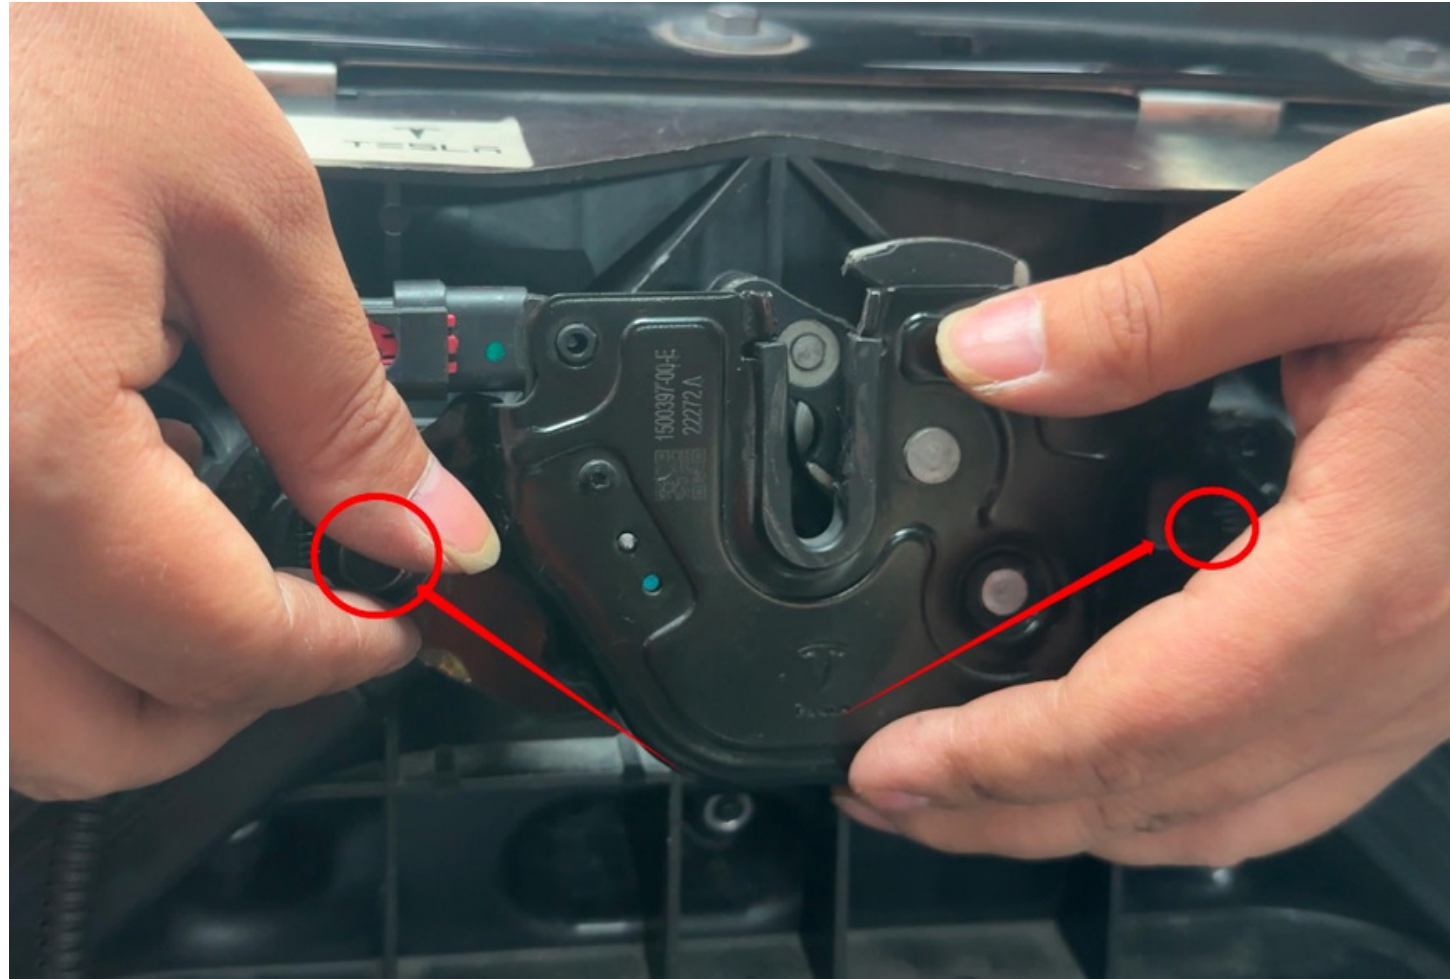


6 Loosen the screws on the original trunk lock




7 Remove the plastic cover from the original lock


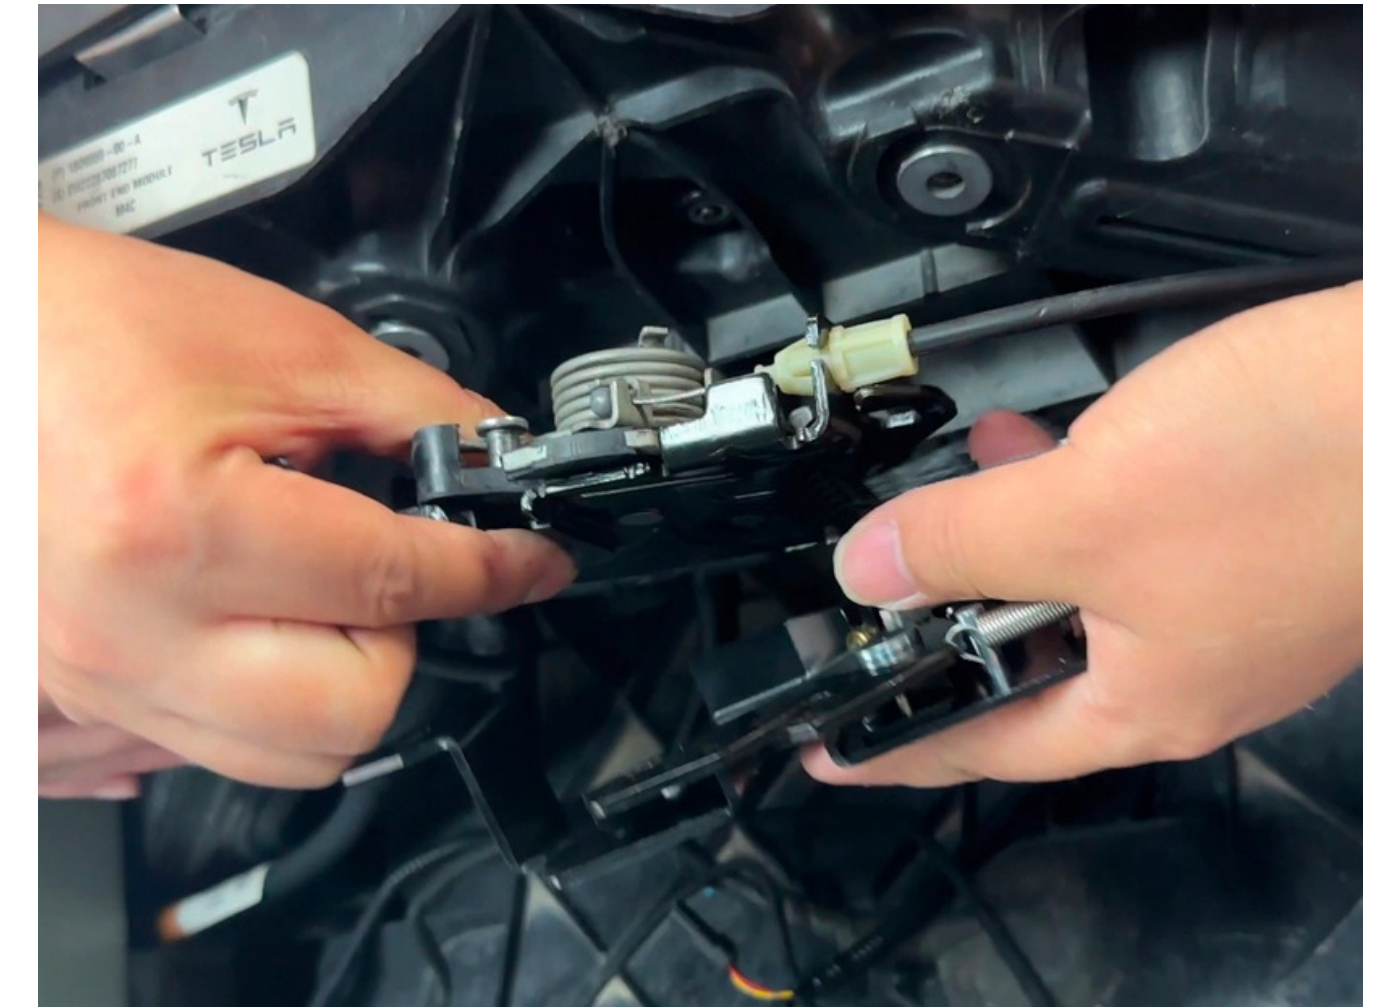


8 Attach the suction module to the original lock

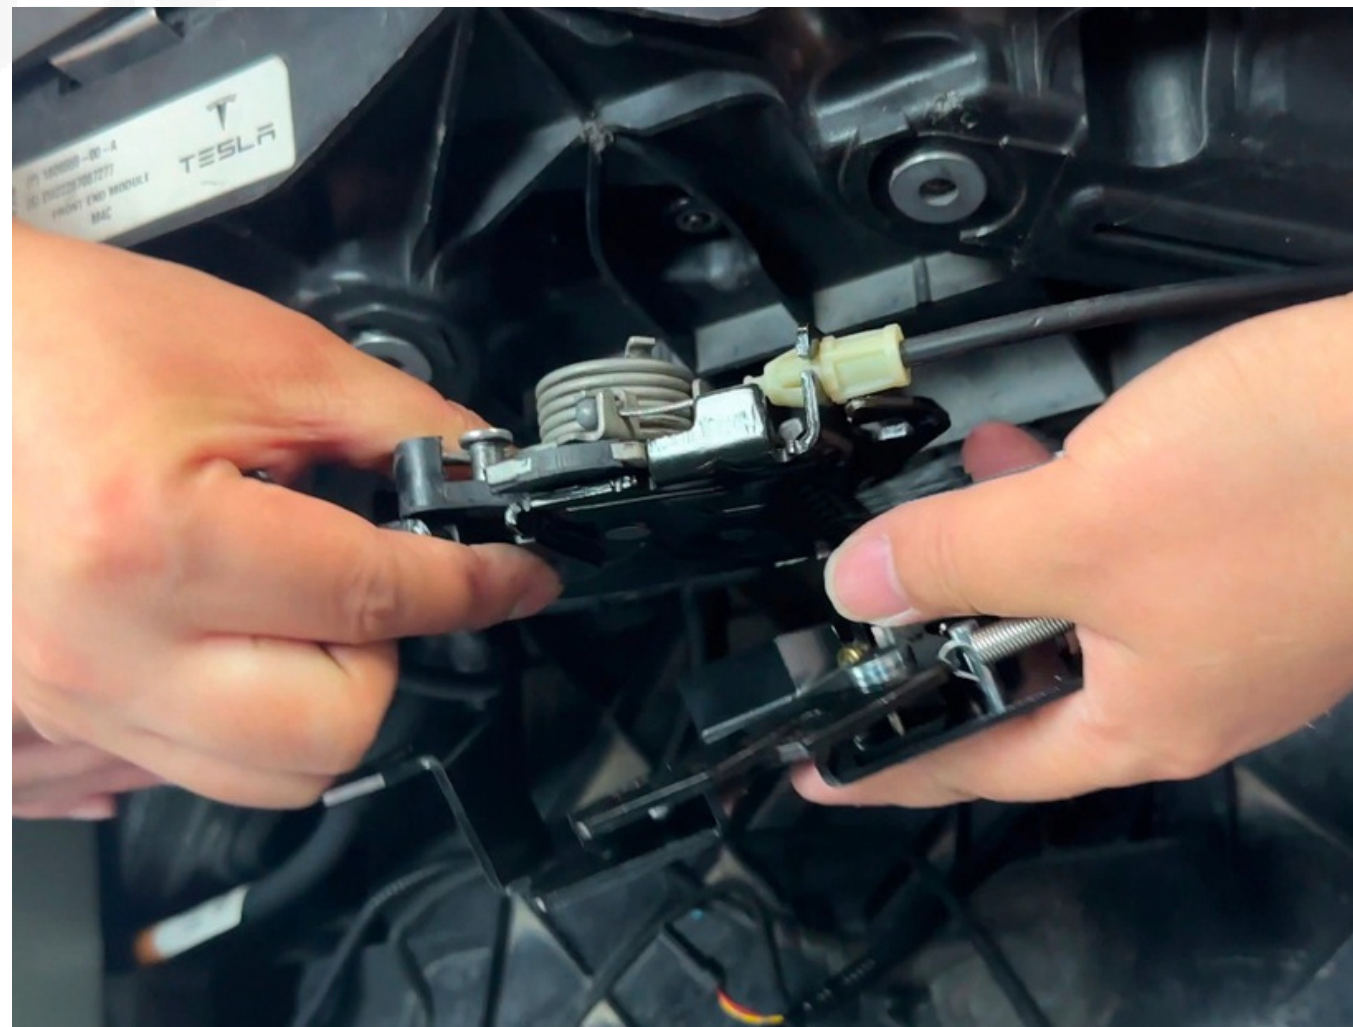

9 Secure it back with the original screws

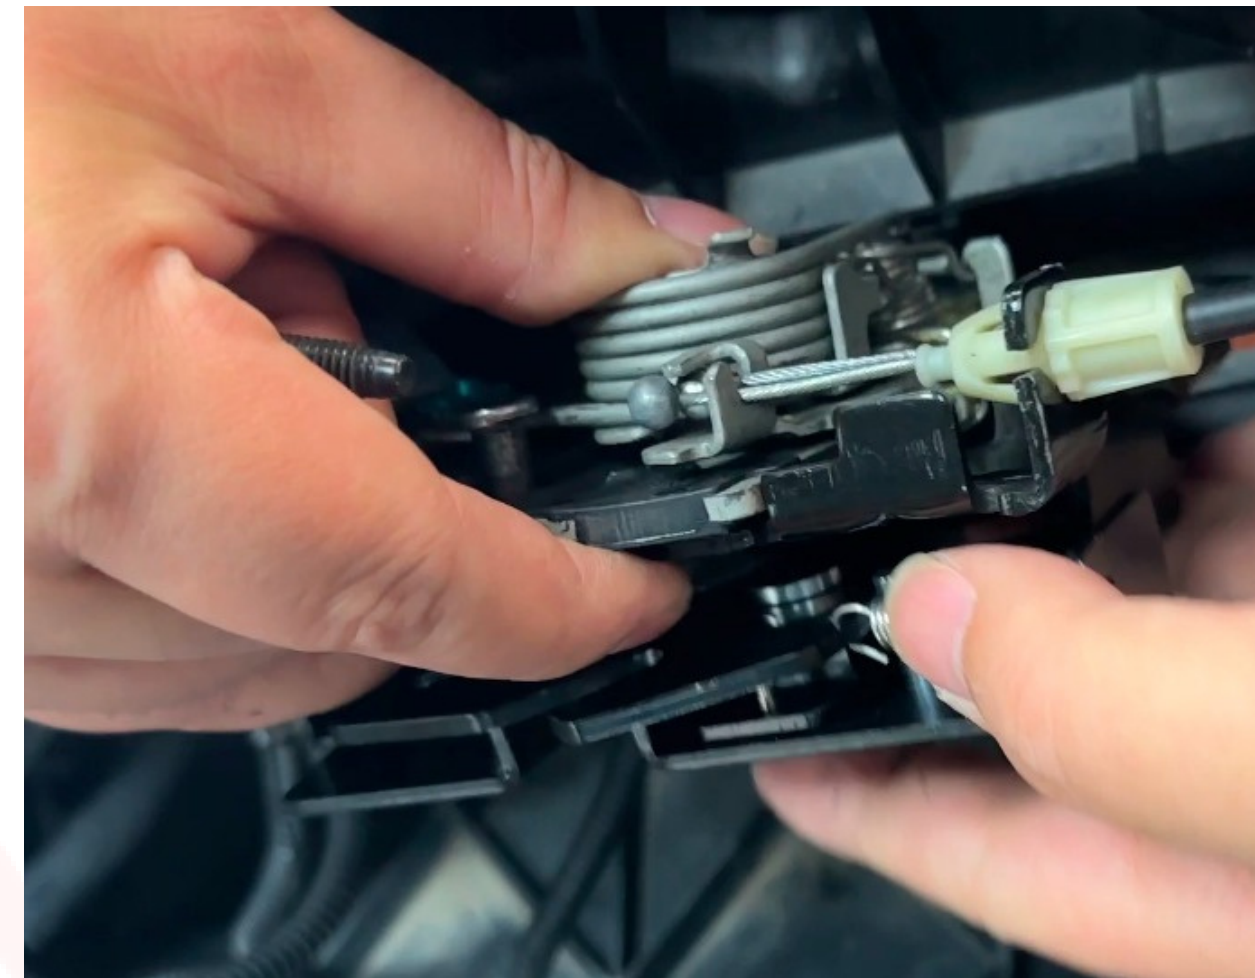

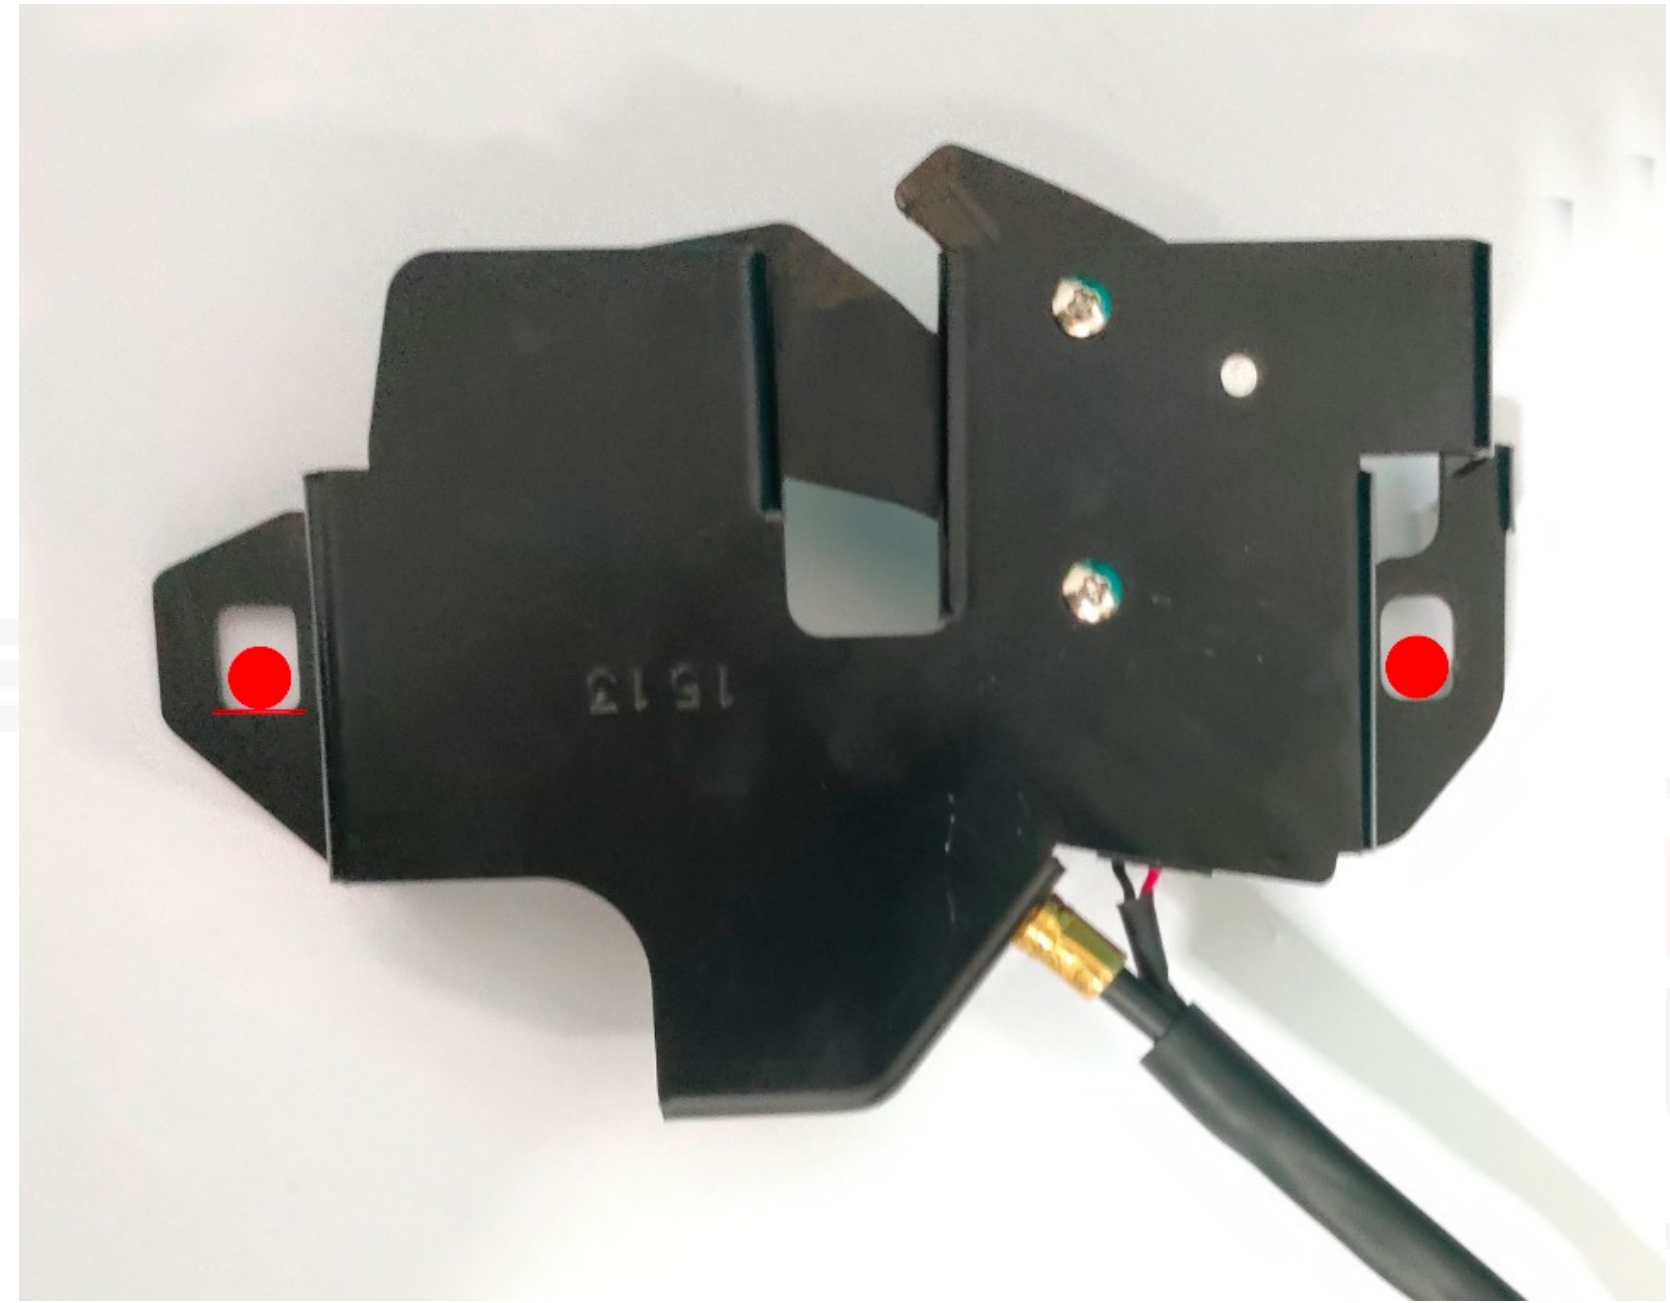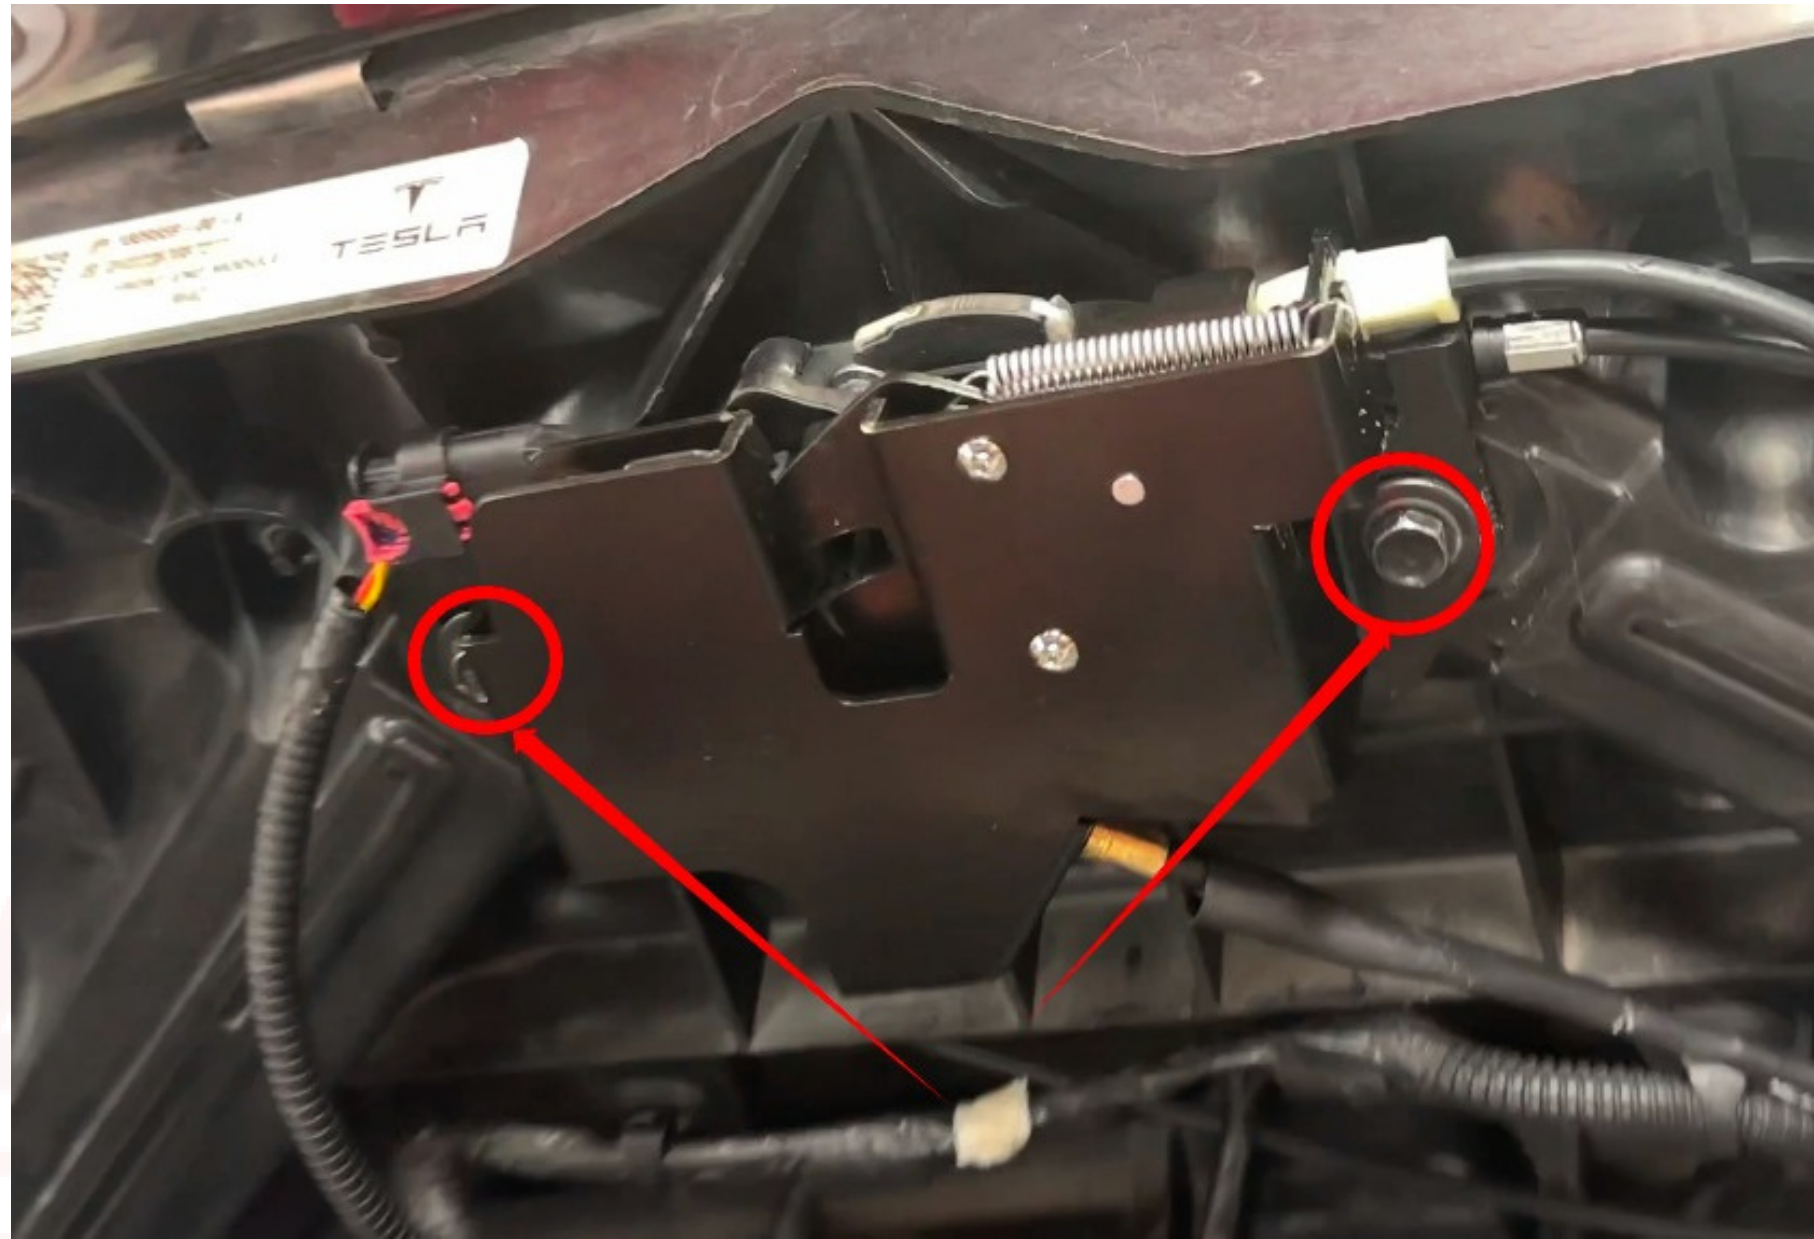

**Note when fixing: Attach the screws to the bottom of the holes on both sides of the electric suction module lock. (Fix the electric suction module to the top position),
As marked in red on the picture above**


Model Y



**You can choose to fix the motor on the left or right side on the car.
There are spots on both sides with available bolts to use.**

**This model is slightly different from the one in package, but the fixture is the same.
Use the bolt already attached to the car.**

Power connection

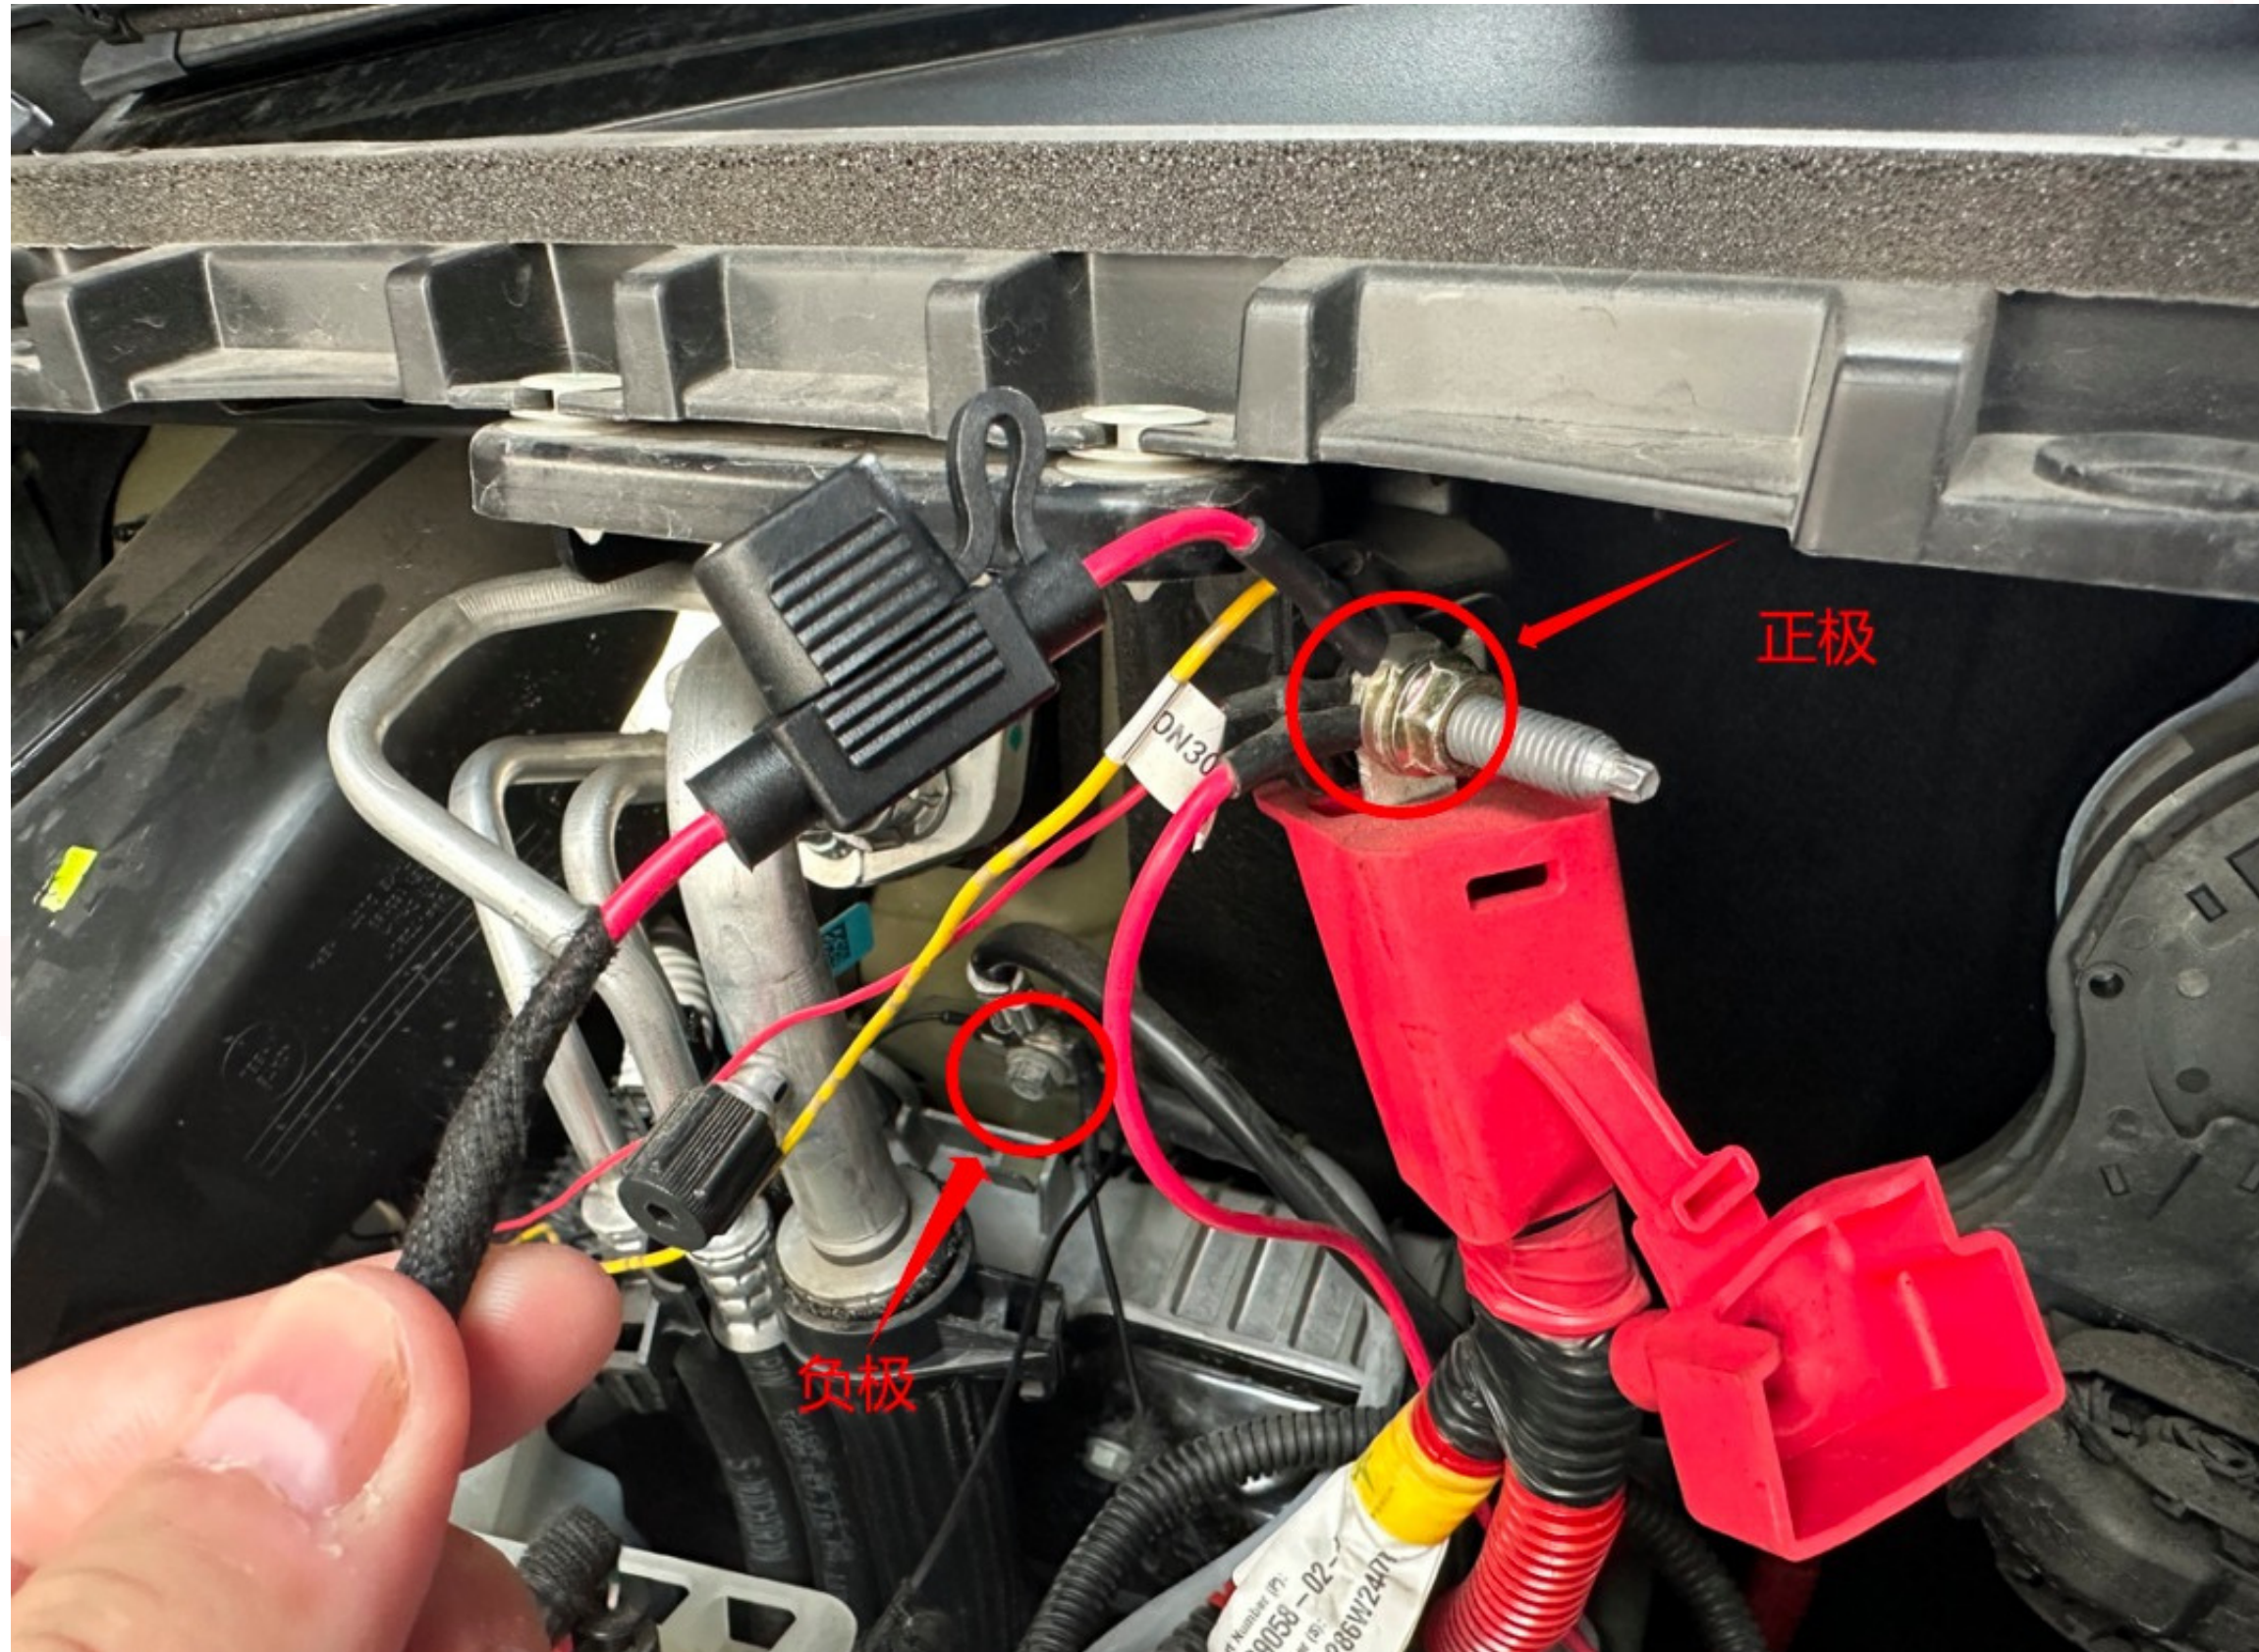

Model Y power connection

Connect as shown on picture. Different year models might look different.
You can also connect the wires straight to the +positive and -negative pole on the battery.